

## Call out LF88.

Call out all roof elevations (ridge, parapet, chimney, etc.) at 88datum.

Height will be calculated from the pre-disturbed natural grade by determining the difference between the roof elevations and the contour lines directly below them.